

CITY VERSA™

ASSEMBLY INSTRUCTIONS



Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

This product complies with
ASTM F833-11.



www.babyjogger.com

For the sake of your precious cargo, please read these warnings before using your stroller.

WARNING:

- This product is not suitable for jogging, running, skating, or rollerblading.
- Never leave your child unattended.
- Prevent serious injury to your child by always using the safety harness.
- Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
- Check that the pram body or seat unit attachment devices are correctly engaged before use.
- Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
- Any load attached to the handle affects the stability of the stroller.
- Use a harness as soon as your child can sit unaided.
- Always use the crotch strap in combination with the waist belt.
- Always lock the brake when loading and unloading child.
- The passenger shall remain seated (no standing in the stroller).
- Watch out for cars – never assume that a driver can see you and your child.


WARNING:

- This stroller seats one passenger.
- This seat unit is not suitable for children under 6 months.
- This stroller is suitable from 6 months to 5 years (maximum weight: 50 lbs).
- Total weight load recommended for this stroller is 67 lbs (50 lbs in seat, 2 lbs in seat back pocket, and 15 lbs in basket).
- Recommended weight for seat pocket is 2 lbs and basket is 15 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller will not be covered under warranty.
- Accessories which are not approved by the manufacturer or distributor shall not be used.
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.

TABLE OF CONTENTS

Unfolding & Handle Height Adjustment.....	1
Front Wheels & Swivel	2
Rear Wheels.....	3
Parking Brake.....	4
Opening the Seat.....	5
Attach Canopy.....	6
Attach Seat – Forward & Parent Facing.....	7
Safety Harness.....	8-9
Footwell Adjustment.....	10
Seat Recline – Forward & Parent Facing.....	11
Folding – Forward Facing.....	12
Folding – Parent Facing.....	13
Storage Strap.....	14
Unfolding & Removing Seat.....	15
Removing Canopy & Seat Fabric.....	16
Basket.....	17
Care & Maintenance.....	18
Registration & Warranty.....	19

UNFOLDING & HANDLE HEIGHT ADJUSTMENT

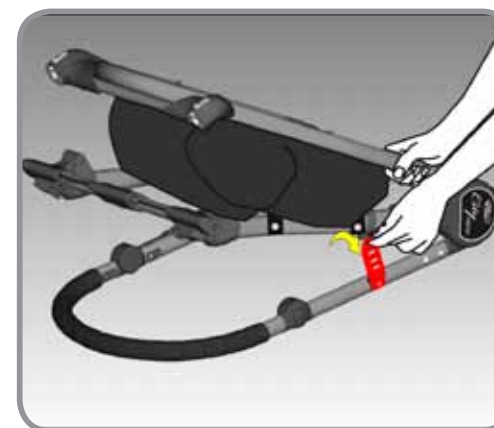


1 Lay stroller frame down so the handle is on the bottom. Begin to unfold stroller by pulling the auto-lock lever while pulling the lower frame up and away from the handle. The stroller will click into place.



2 Turn stroller over to upright position.



3 Snap red safety strap to the frame under the fold mechanism on both sides of the stroller before use.

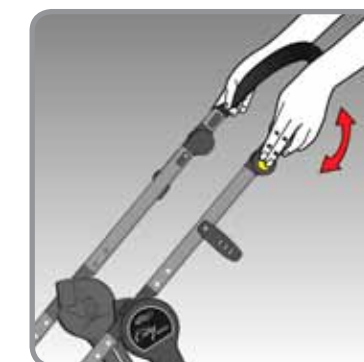


To adjust the handle height:

- 1** Press buttons on both sides of the handlebar.
- 2** Rotate handle to desired height and release the buttons.




WARNING: Ensure that all the locking devices are engaged before use.

FRONT WHEELS

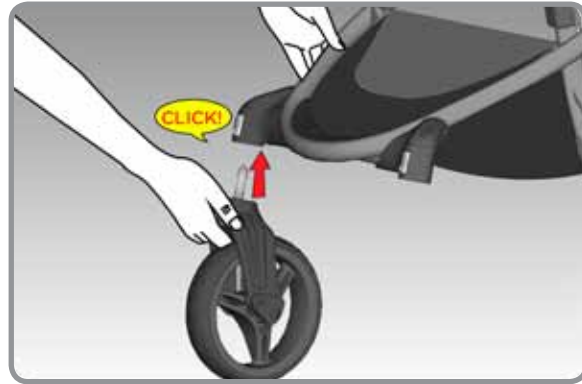

To install front wheels:

- 1 Lay stroller back so the handle is resting on floor.
- 2 Slide the wheel axle into the wheel mount until it clicks into place. Gently tug on the wheel to make sure it is locked into place. Repeat on other side.

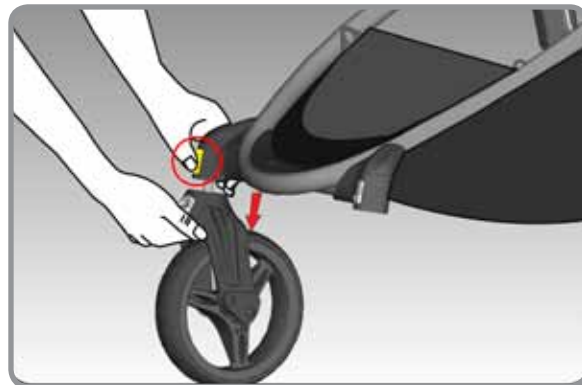

To remove front wheels:

- 1 Press gray tab on front wheel mount and slide front wheel out.

Swivel/Straight Feature



To engage stationary wheel:

- Raise the lever up to lock the front wheel assembly in the straight position. Repeat on opposite wheel.



To engage swivel wheel:

- Press the lever down to allow the front wheel assembly to swivel. Repeat on opposite wheel.


NOTE:

- When loading and unloading child, always lock the front wheel straight.
- Although the front wheel of your stroller locks for all-terrain strolling, it is not intended for jogging or exercise purposes.

REAR WHEELS




To install rear wheels:

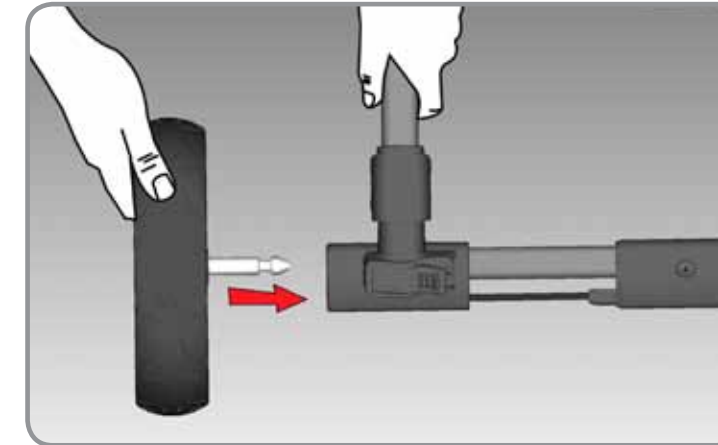

- 1 Align rear wheel axle with rear wheel mount on stroller frame. Insert wheel axle into the wheel mount until it clicks into place.
- 2 Gently tug on the wheel to make sure it is locked into place. Repeat on other side.

To remove the rear wheels:

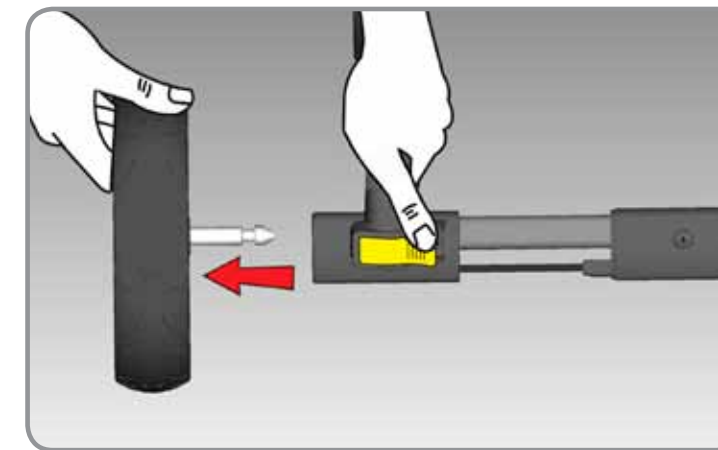


- 1 Press the wheel release button while gently sliding the wheel axle out of the wheel mount.

PARKING BRAKE


- Your City Versa™ features a hand operated parking brake.

To engage parking brake:

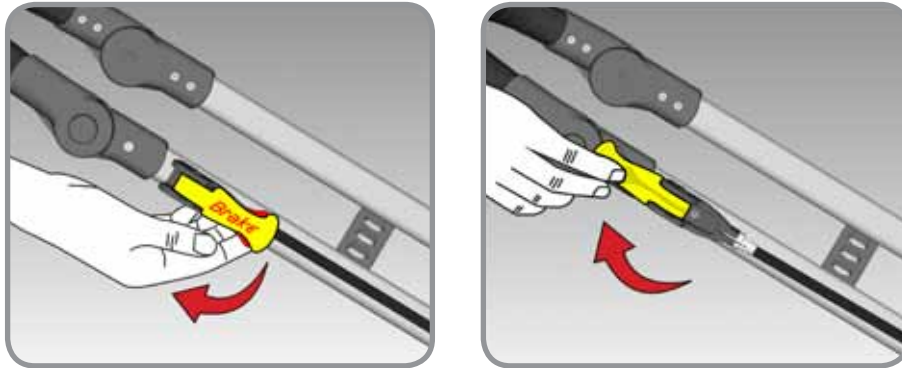

- Pull brake lever into upright position until it clicks into place. Gently push stroller to ensure the brakes are properly engaged.

To release parking brake:

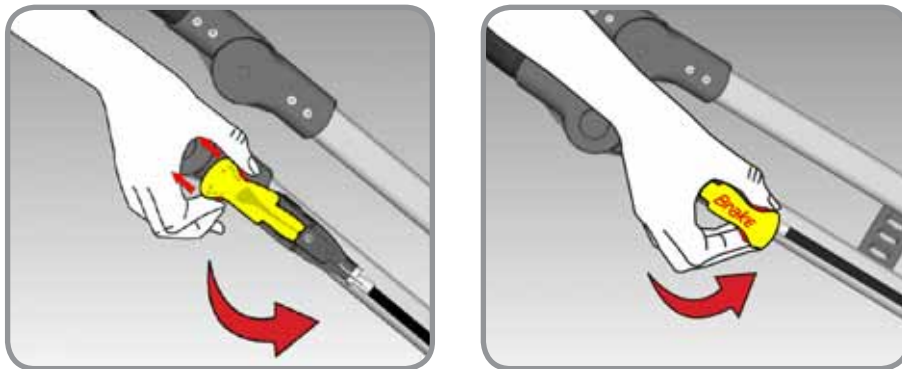


- Pinch gray tabs and pull towards you. Push brake lever down until it is parallel with the frame.

! WARNING: Engage parking device before loading and unloading passenger.


OPENING THE SEAT



To unfold the seat:

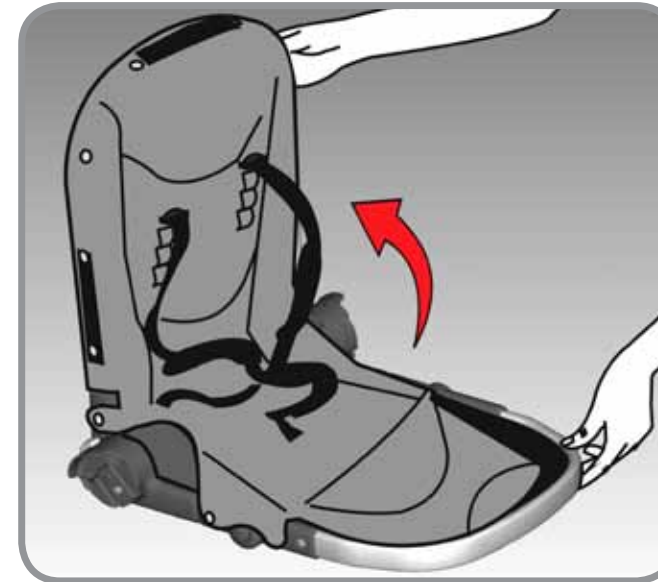


- 1 Holding the footwell and the top of the seat, open the seat.

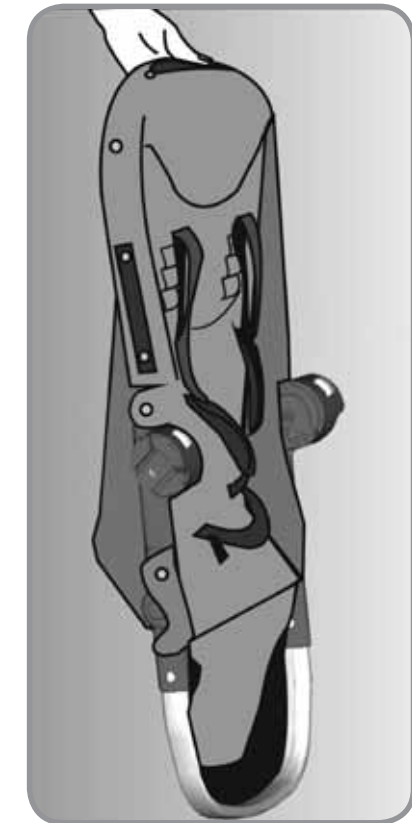


- 2 The seat will lock into its open position.

ATTACHING THE CANOPY

To attach the canopy:

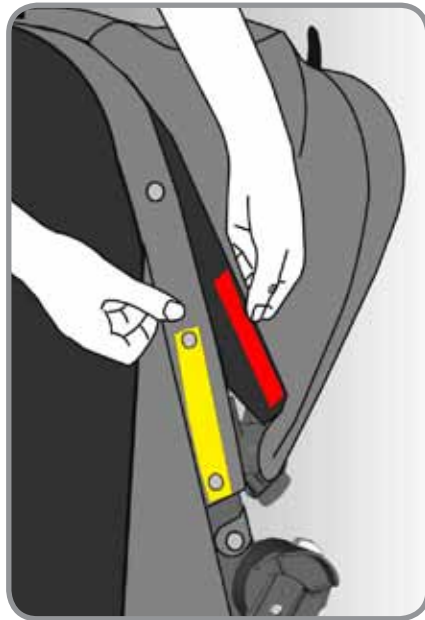

1 Place the rear of the canopy over the top of the seat frame. Secure canopy Velcro® to Velcro® on the seat fabric.

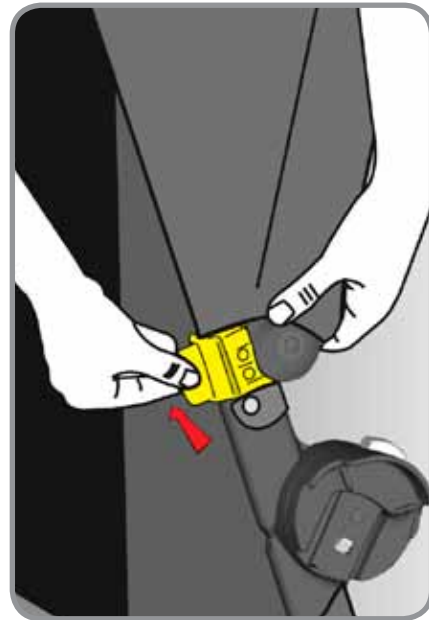

2 Align canopy bracket with open space on the seat frame.




3 Firmly press the canopy bracket on the seat frame until it clicks into place. Repeat on other side.



ATTACHING THE SEAT




To attach the seat:

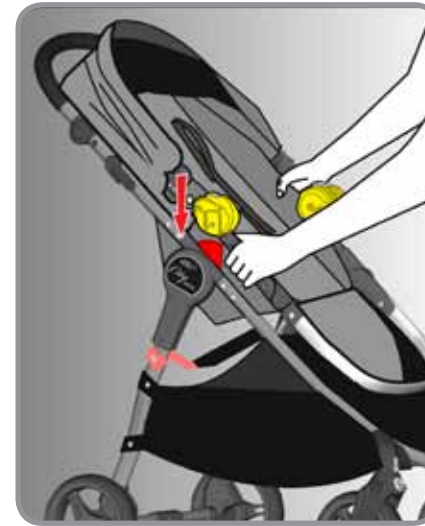

1 Align seat adaptor brackets with mounting brackets on stroller frame.

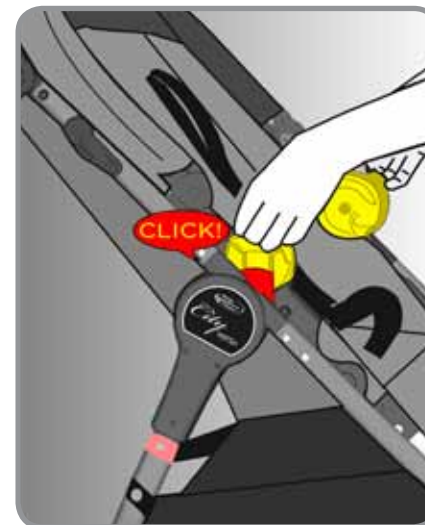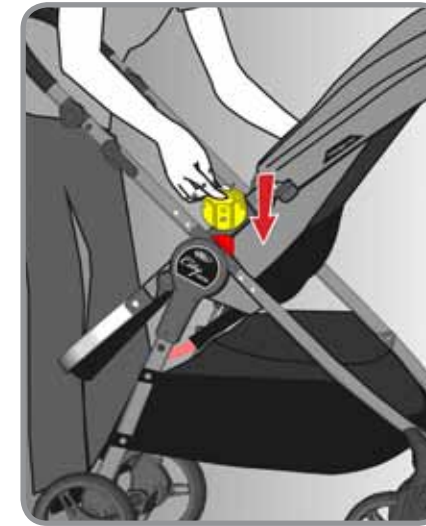

2 The seat will click into place.

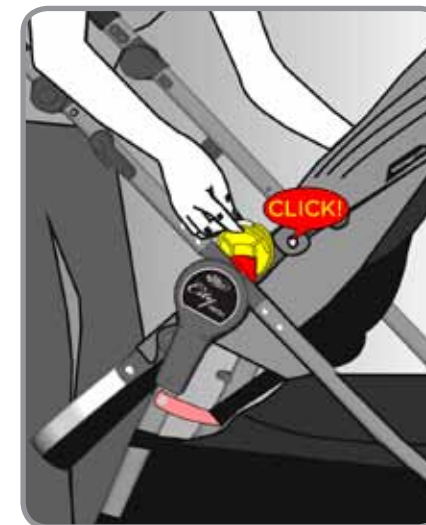


NOTE:

Determine whether you want the seat forward facing or parent facing. The steps for placing the seat on the frame are the same for either seating direction.


SAFETY HARNESS



To adjust harness height:

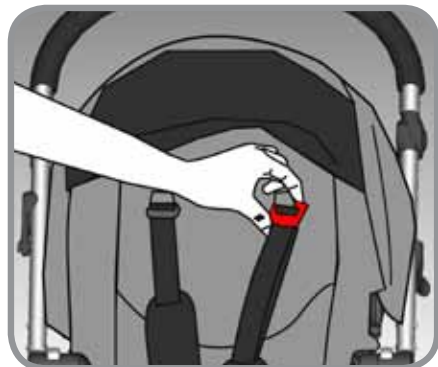


1 Pinch the top of the harness clip to unlock.

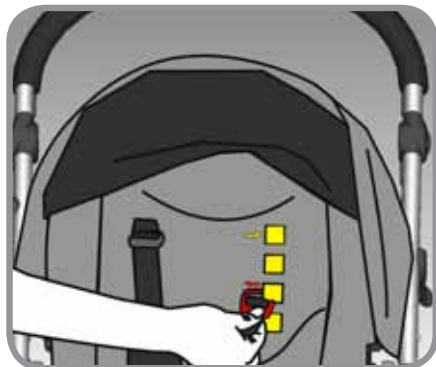

2 Slide the harness clip out and re-clip to the seat loop closest to the child's shoulder height.

⚠ WARNING: Avoid serious injury from falling or sliding out. Always properly adjust and fasten safety harness.


To adjust harness length:

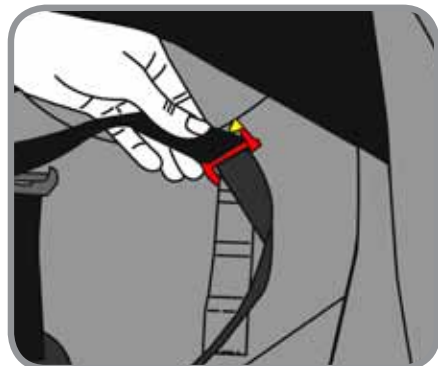

1 Lift up on the bottom of the harness clip and remove harness strap from the side retainers.



2 Pull on strap end to tighten shoulder strap or pull on the main strap to loosen the shoulder strap.

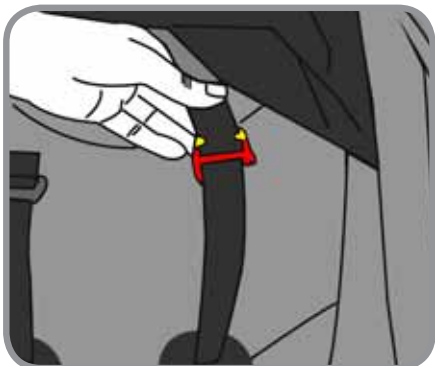

3 Place harness strap back into the side retainers.


SAFETY HARNESS

To buckle:



Simply push top right buckle clip into the right side of the center buckle until it clicks into place. Repeat on other side. The buckles should always be clicked into place before using the stroller.

To unbuckle:

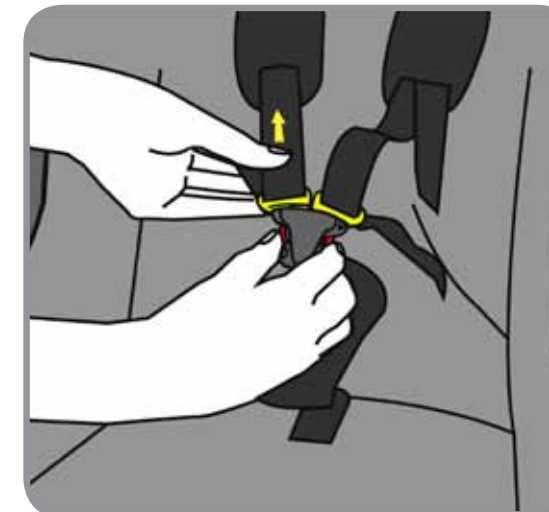


Push one side of the center button and pull the corresponding side buckle clip away from the center buckle. Repeat to unbuckle other side.


⚠ WARNING: Always use the crotch strap in combination with the shoulder straps and waist belt.

FOOTWELL ADJUSTMENT

To adjust footwell angle:

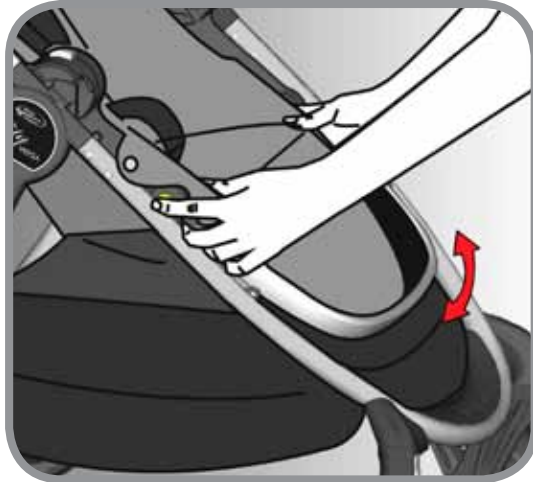

1 Press large round buttons on upper portion of footwell.

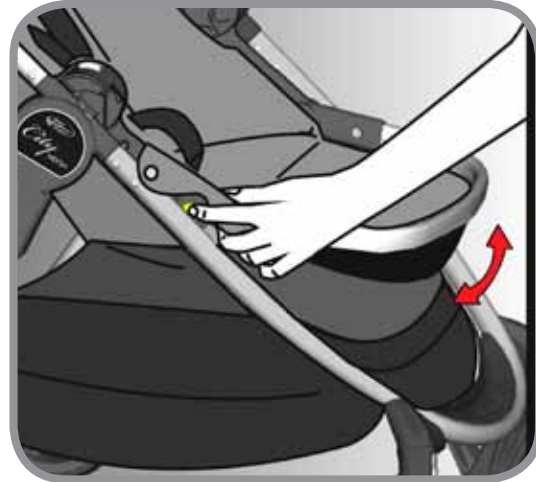

2 Adjust footwell up or down to desired position and release buttons so it clicks into place.

To adjust footwell length:



1 There are two length positions on your footwell. Press in on small gray buttons on lower portion of footwell.




2 Slide in or out until it clicks into place.

SEAT RECLINE




To recline the seat:


NOTE: The steps for reclining the seat are the same no matter which direction the seat is facing.

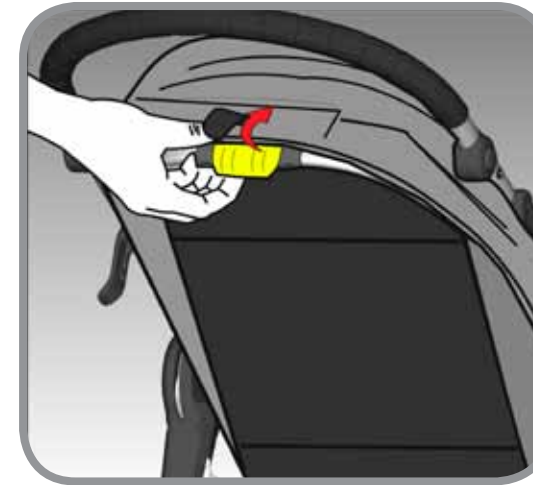

1 Lift up on flat lever located under the top seat back.

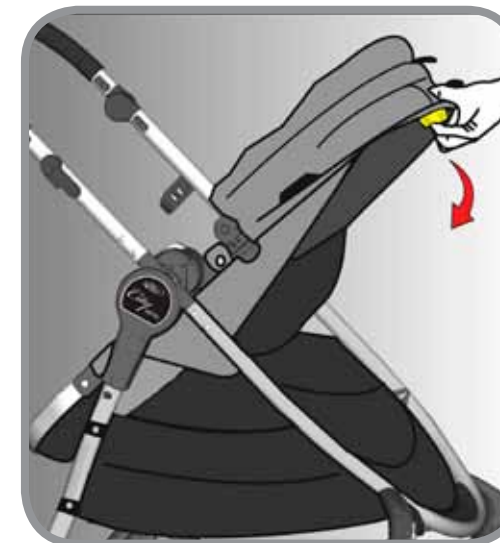

2 While lifting up on the lever, pull down to lower seat and release the lever at the desired position. The seat will click into place.

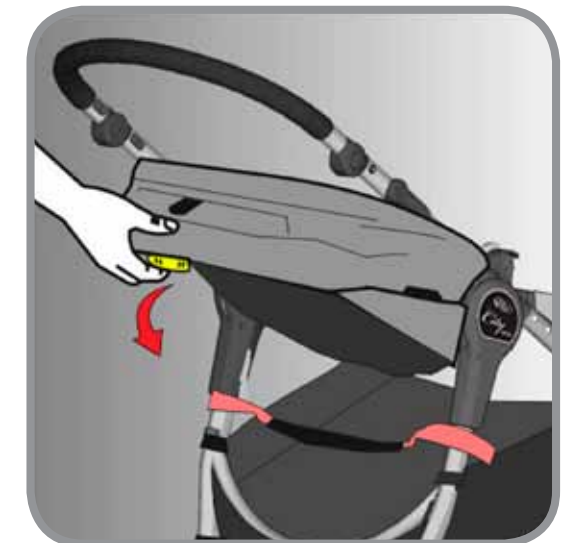

FOLD – FORWARD FACING

FOLD – PARENT FACING



1 Pinch seat fold buttons located beneath the recline lever on the top of the seat back.



2 Push seat forward until it is folded in half.



3 Unsnap red safety straps from both sides of the frame.



4 Pull up on the handle marked "Pull to Fold."



5 The stroller will fold in half.



1 Pinch seat fold buttons located beneath the recline lever on the top of the seat back.



2 Push seat forward until it is folded in half.



3 Unsnap red safety straps from both sides of the frame.



4 Pull up on the handle marked "Pull to Fold."




5 The stroller will fold in half.

STORAGE STRAP


UNFOLDING & REMOVING THE SEAT



A seat storage strap is provided to keep your City Versa™ seat in place when folded.

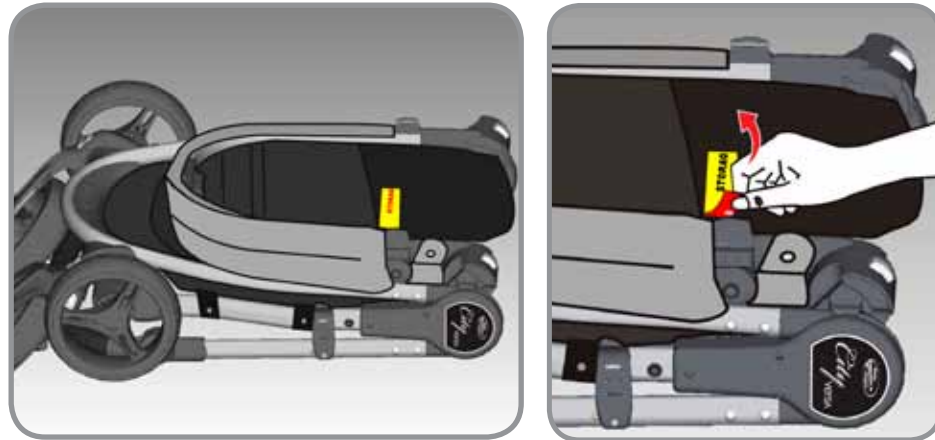


1 Locate seat storage strap on the back of the Versa seat. Unsnap the storage strap from its secured position on the seatback.

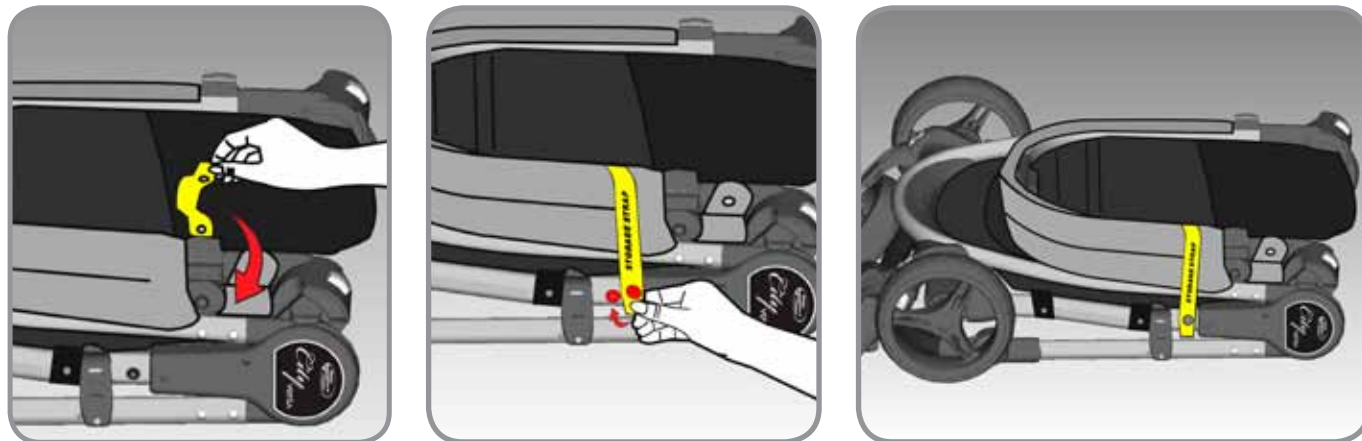

2 Attach seat storage strap to stroller frame just below the fold mechanism.

To unfold the stroller:

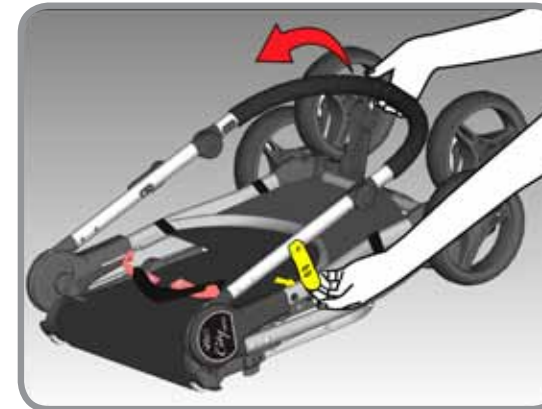


1 Pull up on the auto-lock to release the frame while lifting up on the stroller handle until the frame clicks into place.



2 Pull the top of the seat up to unfold until it clicks into place.

To remove the seat:

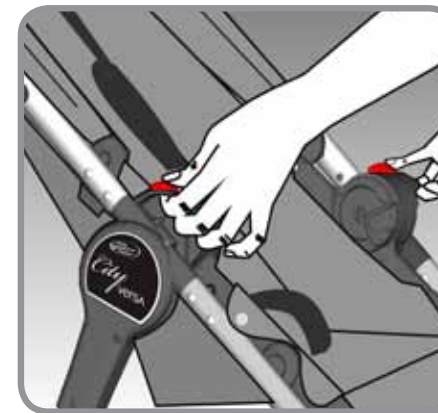

1 Push gray tabs on both sides of the seat attachment brackets.



2 Lift up and the seat will detach from the frame.


NOTE: The steps for removing the seat are the same no matter which direction the seat is facing.

REMOVING THE CANOPY & SEAT FABRIC

To remove the canopy:




1 Pull the canopy bracket out and away from the seat frame to detach. Repeat on other side.

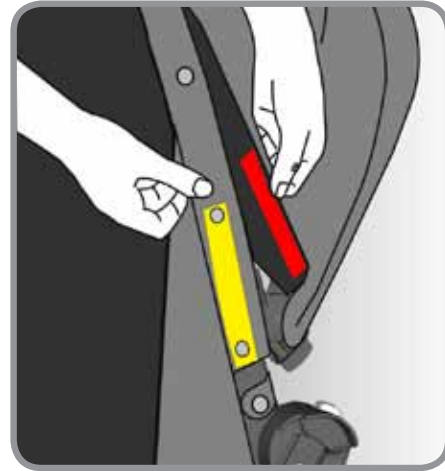


2 Detach canopy Velcro® from the seat Velcro on both sides.


To remove the seat fabric:

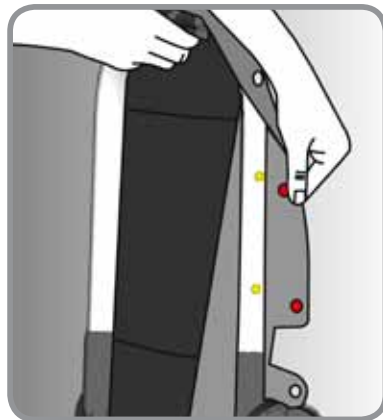

1 Unsnap seat fabric from seat frame.

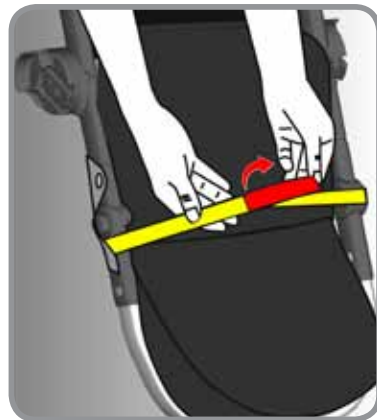

2 From the back of the seat, unfasten Velcro® and slide strap through the D-ring.

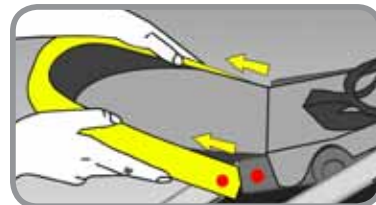

3 Press gray buttons and pull out on footwell to remove the footwell bar from the seat frame. Pull seat fabric out of channel in footwell bar.

BASKET



The basket of your City Versa™ comes fully attached. However, it is easy to remove for cleaning.



NOTE: Be sure the lower front of the basket is placed in the groove of the Versa plate near the bottom of the frame.



To remove the basket:

1 From the front of the stroller, unclip the plastic basket brackets from the stroller frame on both sides.

2 From the rear of the stroller, unsnap the basket snaps next to the center crossbar on both sides.

3 Unsnap the basket snaps from below the center crossbar on both sides.

CARE & MAINTENANCE

To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

Washing

Seat Fabric

- You can machine wash your stroller's seat in cold water with a mild detergent.
- Be sure to remove the PE boards from the back of the seat, the fabric from the seat frame, and the footwell bar before washing.
- Do not use solvents, caustic or abrasive cleaning materials.
- Do not press, iron, dry clean, tumble dry or wring the fabric.
- To minimize shrinkage, simply reattach the seat to the frame to dry.

Plastic/Metal Parts

- Wipe clean using a mild soap and warm water.
- You must not remove, dismantle or alter any part of the seat folding mechanism or brakes.

Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.
- Use only a silicone based lubricant. Do not use WD-40®.

Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks.
- Ensure that the stroller is dry before storing for prolonged periods.
- Always store the stroller in a dry environment.
- Store the stroller in a safe place when not in use (i.e. where children cannot play with it).
- DO NOT place heavy objects on top of the stroller.
- DO NOT store the stroller near a direct heat source such as a radiator or fire.

REGISTER YOUR STROLLER ONLINE AT

www.babyjogger.com/register

Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

If your stroller was purchased outside of the United States please contact the distributor in the country where you purchased the stroller. Their contact information can be found on our website at http://www.babyjogger.com/international_distributors.aspx. Claims for warranty outside of the country in which the product was purchased may incur shipping charges.

NOTE: When contacting Baby Jogger regarding your stroller, please have your stroller's serial number and manufacturing date ready. It can be found engraved into the plastic of the left fold mechanism.

E-Mail: customerservice@babyjogger.com

Call: 1-800-241-1848 between 9am – 6pm EST, Mon. – Fri.

Fax: 1-804-262-6277

Mail: The Baby Jogger Company
8575 Magellan Parkway
Suite 1000
Richmond, VA 23227



The Baby Jogger Company

*8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com*

Printed in China